

Aa Bb Cc Dd Ee Ff Gg Hh

How to Clean your SMARTBoard

Before cleaning, shut down your board and the connected computer, and dust the board with a damp cloth. You may clean your SMARTBoard with a solution such as Windex glass cleaner. If this doesn't work, clean your display with a dry-erase solution such as Expo brand cleaner. You may need to rub up to 200 times. **NOTE: Do not** spray cleaner directly on the surface. Instead, spray a light amount of cleaner on a soft cloth, and then gently wipe the screen. **Do not** allow excess cleaner to flow into the pen tray recesses or in the crack between the lower frame and the writing surface. Refer to your user's guide for more information about cleaning your SMARTBoard or visit www.smarttech.com

